

# TELESCOPIC MEDIA WALL ASSEMBLY INSTRUCTIONS

## Setting up your tension fabric media wall

1

Inside your nylon carry bag, you will find a number of components all ready to be assembled together to make up your media backdrop.



2

Connect all the poles together, matching tops & bottoms together and Uprights to the Tops and Bottom. Use the hand screws provided and tighten the frame up.



3

Insert the poles into the hole on the top of the Steel feet. Turn the feet over and slide the screen into the base and tighten up using the allen key provided.



4

Release the top bar on one end using the Hand Screws and slide your fabric or banner through until it is in place. Repeat this step for the bottom bar too.



## Caring for your media wall

### Cleaning

If your media wall is starting to get dusty or dirty, you can wash your fabric media wall by simply putting it in the washing machine on a cold wash with half the detergent you would normally use and some fabric softener. Do not tumble dry, simply hang it up on the cloth line and wait for it to be completely dry before packing it up to avoid any mildew or damage.

If you have chosen the Vinyl instead of fabric, you can use warm soapy water to wash the dirt away.

### Maintenance

To ensure your Media Wall lasts as long as possible, we recommend basic steps you would need to take.

- 1- Carefully follow the instructions above when putting your media wall together
- 2- When packing away, make sure you keep all the parts together in the bag and keep the screws inside the fitting so that they do not get loose or lost.